



Step 1-4: Turn on, log in, connect, start training. See page 2 for advanced features and troubleshooting.



STEP 1



Power up

Turn on both the Hazsim and the Control Tablet
Quick Launch button opens the HazSim app or click icon.

STEP 2

Control Tablet

Turn on the instructor tablet. Use your credential to login. No credential, contact HazSim.



STEP 3




Handheld

Turn on Handheld(s). Enter your name or click "skip and continue." Once logged, you will see "Waiting for Instructor".

STEP 4

Start Training

Choose the desired **1** meter and select "Start Session" **2**

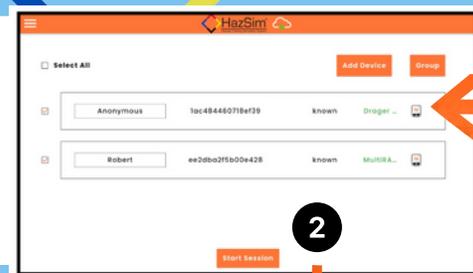

Control Panel with two HazSim's




CONNECT



LTE or WiFi

Your system is LTE-enabled. Look for the green logo to indicated you are connected. If no LTE signal is available, give it a minute, if nothing see WiFi.

WiFi

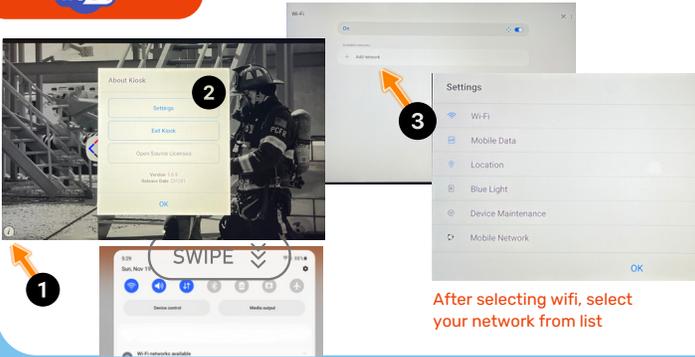

After selecting wifi, select your network from list

WiFi

When LTE is not available due to obstructions at your training facility, you can use the WiFi on either or both devices. Swipe down from the top of Handheld or click on settings on tablet. 1

SYNC



Updating

Use SYNC to update your system, Use the QR code below for more on how to set up more meters, make new questions, and more.

CAMERA*




Capture the moment

Use the camera icon to take a photo during the training, whether to highlight a teachable moment or document the class photo for attendance. The photo is stored with the course data for review.

*when enabled

Q&A

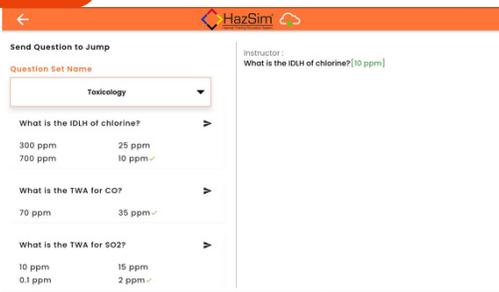

Student Success

Select a group then the question to send the student, select which answer is correct, then send. You can also add thumbs up or down during the evolution. You can review after the drill.



SCAN ME!

